

Diopter
Adjustment Dial

DC IN Jack

Video Out Jack

USB Connector

Connector cover

Battery Compartment
Cover

Battery Compartment
Lock

Tripod
Socket



Battery Compartment



Battery Charger

Battery
Charging
Cradle

Charge
Indicator
Lamp

Power
Cord



Memory card install




Turn on camera

Program
Mode
Setting



Set time and date

 1 . 1 . '00
0 : 00

Take an image



- Aim the camera
- Focus by depressing the shutter button half way
- Take the picture by fully depressing the shutter button

Image resolution and size

Mode		Resolution	Compression	Number of Images on a 8MB Card
Still Camera Mode				
TIFF		1600 X 1200	Uncompressed	1
		1024 X 768		3
		640 X 480		8
SHQ		1600 X 1200	Low-compressed JPEG	7
HQ		1600 X 1200	Standard JPEG	16
SQ1	High Quality	1024 X 768	Standard JPEG	13
	Normal			38
SQ2	High Quality	640 X 480	Standard JPEG	32
	Normal			82
Movie Camera Mode				
HQ		320 X 240	N/A	11 Sec.
SQ		160 X 120	N/A	52 Sec.

Using Zoom



Zoom
Lever

Shooting movies




Movie
Mode
Icon

Reviewing images

Playback
Mode
Icon



Reviewing movies

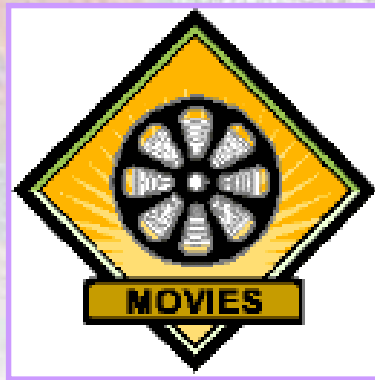


Deleting images/movies

- Stored images and movies can be deleted individually
- The entire card can be cleared at one time


Removing smartmedia



Adapter Back

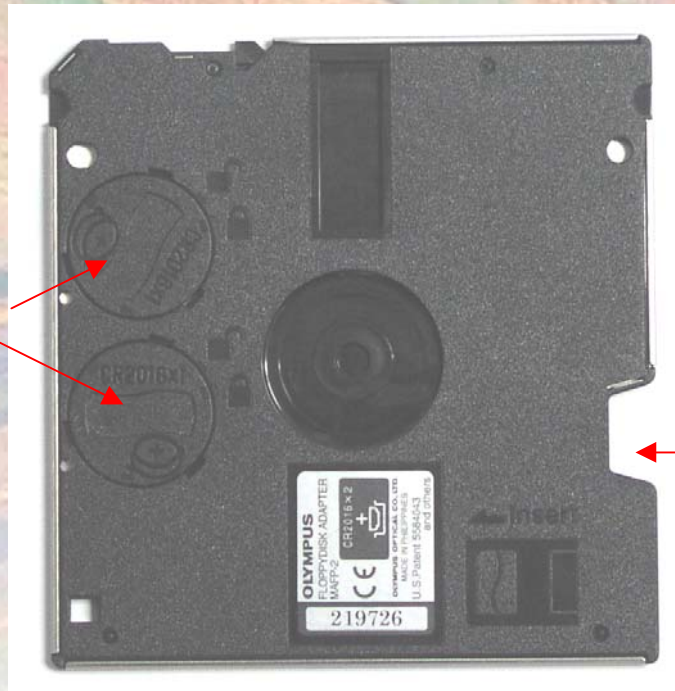


Adapter Front

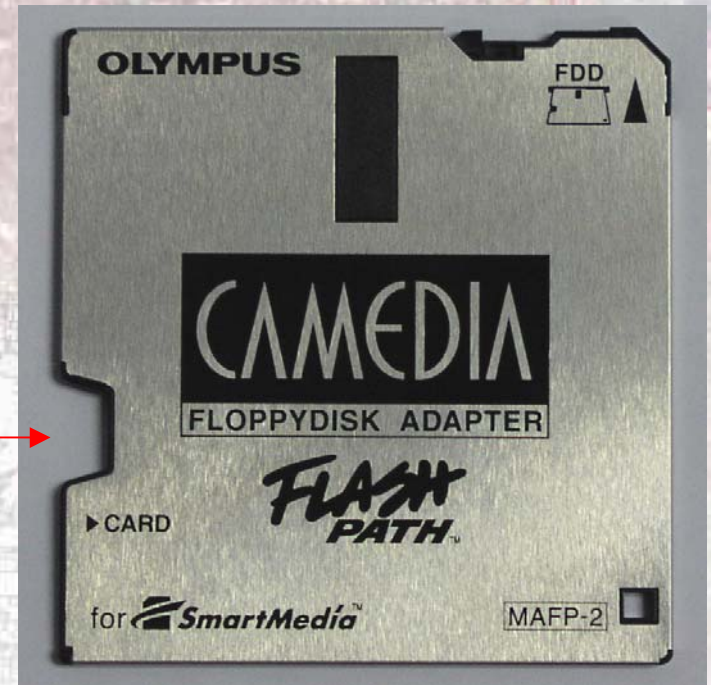

Battery
Doors

Card
Slot

Download

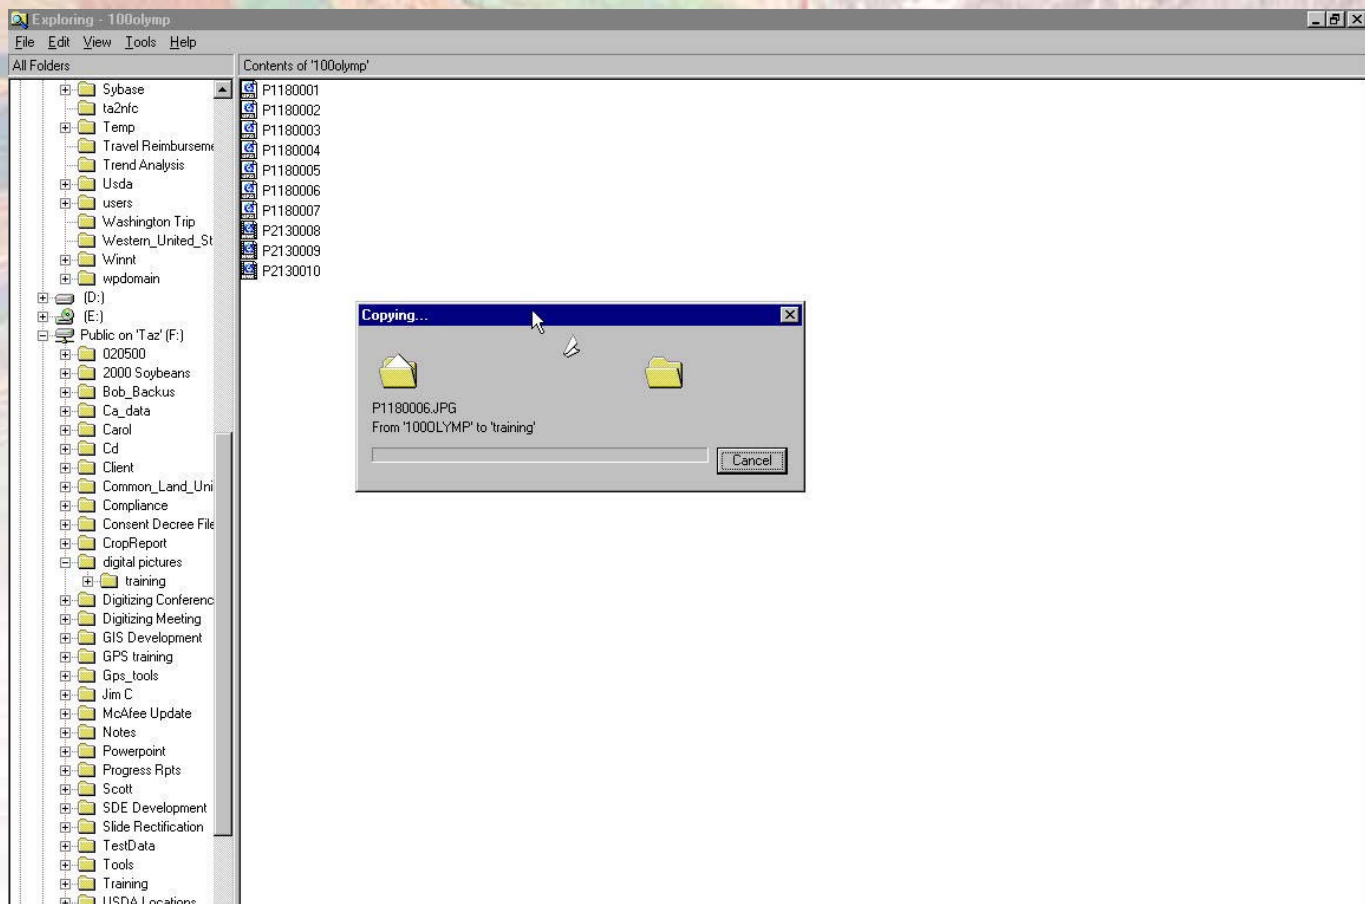

Additional Capabilities

- Formatting new flash media
- Advanced photography settings
- Movie editing
- Consult the manual for more details